



SET-UP INSTRUCTION

R O T A R Y S T A R

To ensure the machine to be used as long as possible, the right handling is required. Read the operating instructions carefully before using the machine for the first time. If you have further questions, ask your responsible contact person or write to info@einboeck.at


The rotary hoe breaks up crusts and aerates the soil. Especially in regions with heavy rainfall, the rotary hoe promotes plant growth. In addition to the crust-breaking effect, weed control is also done out in the same work step. It should be used as soon as possible after the rain. The drier the soil is, the less is the effect or the breaking of the crust. In some cases, half a day earlier or later can already make a big difference.

Adjustment of the Rotary hoe:

1. Attach the machine to the tractor in a horizontal position.
2. The under linkage arms of the tractor hydraulics should be free movable.
3. Depth adjustment via feeler wheels. The higher the wheels run, the more aggressive you can adjust the rotor stars via the hydraulic level control. As a standard setting, the third hole from the top (see picture page 2) is universal. It is enough clearance up and down here.
4. Set the pretension of the rotor stars via hydraulic level control. The setting value can be seen on the black display.

Use of the machine:

- » Working speed between 12 and 25 km/h / 7-16 mph
- » Working depth of the stars: 2 and 4 cm / 0.8-1.6"

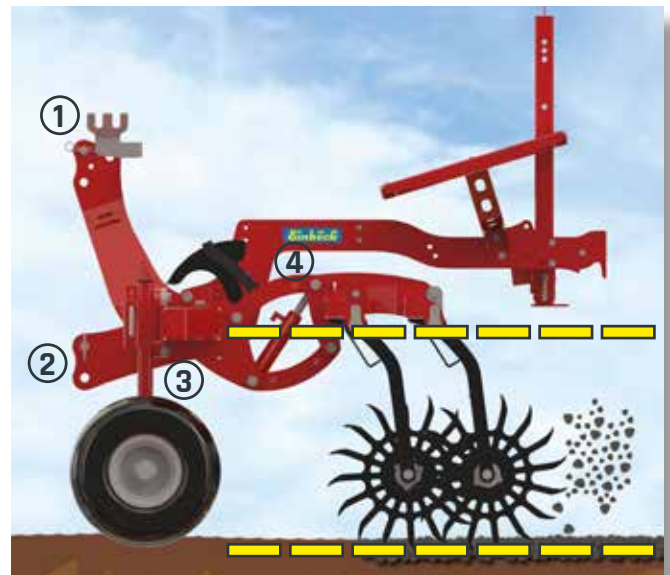



Practical tips can be found in the "Organic Farming Handbook":

<https://www.einboeck.at/en/handbook>

Under the following link you can see the work result and the correct setting:

<https://www.einboeck.at/en/rotarystar>